B₂SS[®]



SOLO⁷⁰⁰

One Man Aluminium Tower 3T - Through the Trapdoor Method

USER GUIDE

Contents

Safety First	2
Component Diagram	7
Quantity Schedules	Ş
Stabilisers	10
Build Method	11

Introduction

Please read this user guide carefully.

Please note that diagrams are for illustrative purposes only. User guides are also available to download from our website at bossaccesstowers.com.

BoSS mobile aluminium towers are light-weight scaffold towers used throughout the building and construction industry for both indoor and outdoor access solutions where a stable and secure platform is required. Ideal for maintenance and installation work or short-term access, the highly versatile towers provide a strong working platform for a variety of heights.

This user guide provides you with step by step instructions to ensure your system is erected easily and safely, using the 3T (Through The Trapdoor) method.

The law requires that personnel erecting, dismantling or altering towers must be competent. Any person erecting a BoSS mobile tower must have a copy of this user guide. For further information on the use of mobile access and working towers consult the PASMA operators code of practice.

If you need further information, design advice, additional user guides or any other help with this product, please contact the manufacturer on +44 (0)1621 745900 or email uk.customercare@wernerco.com.

Safe use

- Check that all components are onsite, undamaged and that they are functioning correctly - (refer to Checklist and Quantity Schedules).
 Damaged or incorrect components must never be used and must be segregated for replacement, repair or destruction.
- Ensure the ground on which the mobile access tower is to be erected and moved is capable of supporting the tower.
- The safe working load is 275kgs (675lbs), per platform level, uniformly distributed up to a maximum of 550kgs (1213lbs) per tower
- Adjustable legs should only be used for levelling.
- Do not use ladders, steps, boxes or similar to gain additional working height.
- Mobile Access Towers are not designed to be lifted or suspended.
- The manufacturer strongly advises against the mixing
 of tower components because of the potential safety risks for
 users, and their inability to rely upon the manufacturer's Product
 Liability Insurance in the event of an accident occurring as a result
 of mixing components from different manufacturers.
- It is recommended that towers should be tied to a solid structure when left unattended

Lifting of individual tower components

- Tower components should be lifted using the BoSS SOLO⁷⁰⁰ assembly bracket.
- Raising and lowering components, tools and/or materials by rope should be conducted within the tower base (i.e. within the area bounded by the stabilisers). Ensure that the safe working load of the supporting decks and the tower structure is not exceeded.

Moving the tower

- Towers should be moved with caution.
- Before moving, check the suitability of the intended route to ensure there are no obstructions, both at ground level and overhead. Wind conditions must also be considered.
- People and materials must be removed and the height of the tower reduced to 4.0m.
- The stabilisers should be left in position and raised no more than 25mm from the ground.
- The tower must only be moved by applying manual effort at, or near, the base of the tower and you should ensure there are sufficient operatives on hand to control the movement of the structure.
- After moving and before use, check that the tower is still correct and complete. Use a spirit level to ensure that it is vertical and level, then adjust the legs as required.
- Do not move the tower in wind speeds over 7.7 metres per second (17mph).

Maintenance - storage - transport

- All components and their parts should be regularly inspected to identify damage, particularly to joints. Lost or broken parts should be replaced and any tubing with indentation greater than 5mm should not be used and put to one side for repair by the manufacturer. Adjustable leg threads should be cleaned and lightly lubricated to keep them free running.
- Brace claws, frame interlock clips, trapdoor latches, camlocks, claw mechanisms and platform wind-locks should be regularly checked to ensure they lock correctly.
- Refer to the BoSS Inspection Guidance poster for detailed inspection and maintenance advice:
 - bossaccesstowers.com/literature.
- Components should be stored in clean, dry conditions with due care to prevent damage.
- Ensure components are not damaged by excessive strapping forces when transported.

Preparation and inspection

 Inspect the equipment before use to ensure that it is not damaged and that it functions properly. Damaged, incorrect or incompatible components must not be used.

During assembly, use and dismantling

- Complete towers, in accordance with EN1004, should be stable in a free standing condition in a wind speed that equates to 28mph or Beaufort force 6. If the wind speed exceeds 17mph, you should cease work upon the tower. If the wind speed is expected to reach 25mph, the tower should be tied into a rigid structure. If it is expected to reach 40mph the tower should be dismantled.
- The effect of onsite wind conditions must be considered prior to the assembly of a tower.
- Sheets, tarpaulins, cladding or similar, must not be attached to the tower as these will significantly increase any side loads from wind and will potentially make the tower unstable.
- Wind conditions from funnelling effects, such as open-ended buildings, hangers or unclad buildings, must also be considered prior to use as these wind effects can be much greater.


Wind description	Beaufort scale	Beaufort no.	Speed in mph	Speed in m/sec
Medium Breeze	Raises dust and loose paper, twigs snap off	4	8-12	4-6
Strong Breeze	Large branches in motion, telegraph wires whistle	6	25-31	11-14
Gale Force	Walking is difficult	8	39-46	17-21

- Excessive side loads from working on the tower, i.e. drilling or pulling may also make a tower unstable. The maximum allowable side load on a tower is 20kg.
- Do not abuse equipment. Damaged, incorrect or incompatible components should not be used.

Ties

 You should tie in towers of all heights wherever possible, as it is safe practice to do so. However, where towers are left unattended or are to be located in particularly exposed conditions, wind forces will almost certainly affect stability. In these circumstances ensure that the tower is adequately tied in or restrained from blowing over and that the platforms are securely fixed or alternatively the tower dismantled.

Component Diagram

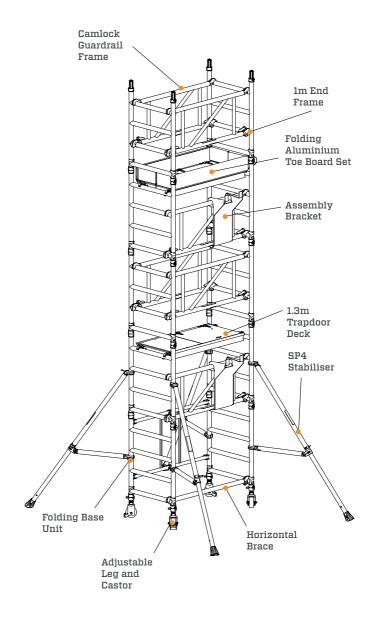

Safety Checklist

Mobile Towers - 3T Method Pre-assembly checklist

Ensure all components are present (see quantity schedule on page 9)	✓
Inspect components prior to assembly	~
Ensure all brace claws, camlocks and adjustable legs operate correctly	~
Ensure castors rotate freely and brakes lock	~
Full inspection guidance can be found here at www.bossaccesstowers.com/literature	~
Pre-use checklist	
Inspect tower prior to use	✓
Tower is vertical and level, using a spirit level, and adjust legs if necessary	~
Castors are locked	~
Correct stabilisers are fitted correctly	~
Platforms are fitted correctly and wind-locks engaged	~
Toe Boards are fitted correctly	~
Guardrails are fitted correctly, see illustrations below	~
Re-inspect the tower every 7 days or less	~









Quantity Schedule

BoSS Solo 700 - 1.3m x 0.7m						
3T Method		Interna	Internal or external use			
Component	Working Height (m) Platform Height (m)	4.2	5.2	6.2		
		2.2	3.2	4.2		
Castor		4	4	4		
Adjustable Leg		4	4	4		
4 Rung End Frame (1.0m high x 0.7m wide)		4	6	8		
Folding Base Unit		1	1	1		
1.3m Camlock Guardrail Frame		3	5	6		
1.3m Trapdoor Deck		1	2	2		
1.3m Horizontal Brace		1	1	1		
Aluminium Folding Toe Board		1	1	1		
Assembly Bracket		2	2	2		
SP4 Telescopic Stabiliser		4	4	4		
Total Self Weight of Tower (kg)		93	121	134		

Number of working platforms allowed

The **MAXIMUM SAFE WORKING LOAD** (the combined weight of the users, tools and materials) that may be placed on the tower is 550kg.

Platform loading

9

The maximum safe working load (the combined weight of the users, tools and materials) that may be placed on a platform is 275kg. This must be evenly distributed over the whole platform level.


The quantity schedules shown in this user guide will enable the tower to be built safely and therefore comply with the requirements of the 'Work at Height Regulations'. Folding toe boards will need to be added if any levels are used as working platforms, or for storage of materials.

This tower system has been developed in accordance with EN1004 for single person use. If the tower is to be used with two people, SP10 stabilisers must be fitted in place of SP4 stabilisers.

Quantity Schedule

Stabilisers

- Stabilisers should always be fitted when specified.
- To improve stability, larger stabilisers can be used at a lower level than shown in the quantity schedules.
- Attach one stabiliser to each corner of the tower as shown.
 Ensure stabiliser feet are equally spaced to form a square.
- SP4 and SP10 telescopic stabilisers must always be fully extended.
- Position the lower clamp so that the lower arm is as close to horizontal as possible. Adjust the position of the top clamp to ensure the stabiliser foot is in contact with the ground. Ensure clamps are secure.
- When moving the tower, adjust the top clamps or the telescopic leg in order to lift the four stabiliser feet a maximum of 25mm off the ground and unlock the castor brakes. After moving, ensure all four stabiliser feet are repositioned in firm contact with the ground.

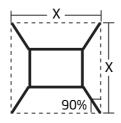




When building a BoSS tower:

- To comply with the 'Work at Height Regulations', we show assembly procedures with platforms every 2 metres in height and the locating of guardrails (in advance of climbing onto a platform) to increase safety and reduce the risk of a fall.
- Never stand on an unguarded platform positioned above the first rung of a tower. If your risk assessment shows it necessary, you may also need to add guardrail platforms at this level.

The procedure illustrated shows a 6.2m working height tower.


The BoSS SOLO⁷⁰⁰ system has been developed so that a single person can safely build the tower to a platform height of 4.2m.

Insert castor into adjustable leg. Apply brake by pushing the lever down, release frame interlock clips and fit the leg and castor assembly into a 1m base frame. Repeat with the remaining legs and castors. Adjustable legs should only be used for levelling.

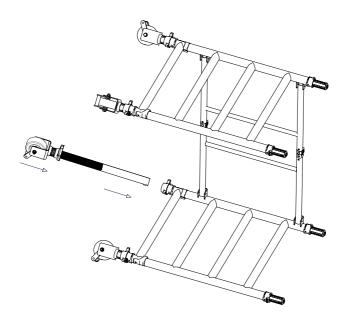


FOLDING BASE METHOD:

- Release brakes on castors at one end frame until the locks engage on the rear folding frame.
- Ensure both hinges positively lock into position.
- Engage brakes on second frame.

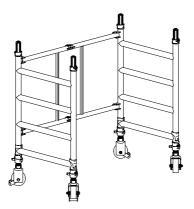


Locate the horizontal brace on the lowest rung with the hooks facing downwards - check the brace is correctly locked on the tube at both ends. Check the base unit is square and level using a spirit level. Adjust legs only to level and not to gain additional height.

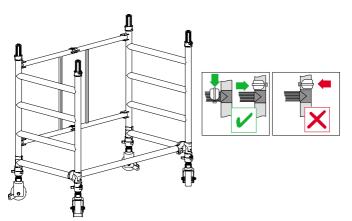


4 STEP 1: Connect two, 4 rung frames together.
Check the interlock clips are engaged and add onto the base unit.
Repeat for the other side.


STEP 2: Position one camlock guardrail unit. The top hooks should locate on the 7th rung from base level.

STEP 3: Engage camlocks as shown to lock guardrail unit in position.

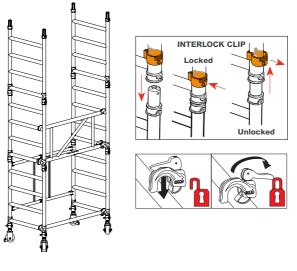

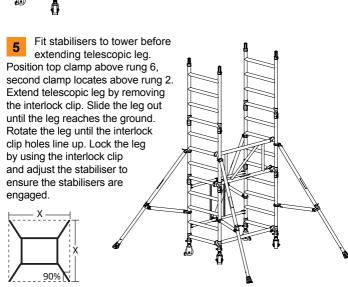


From the ground level, position a trapdoor deck on rung 8. Engage the wind-locks. Locate assembly bracket No. 1 on front face of lowest camlock guardrail. Locate the second assembly bracket on rung 10 of the end frames.

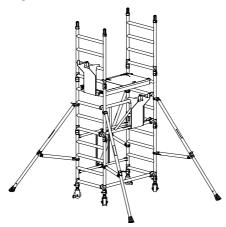

Hang four camlock guardrail units in order on the front assembly bracket and then 1 x folding toe board.


Place the last camlock guardrail on the end frame assembly bracket No 2. Hang two pairs of connected 4 rung frames on the end bracket No 2. then hang the second trapdoor deck on the bracket.

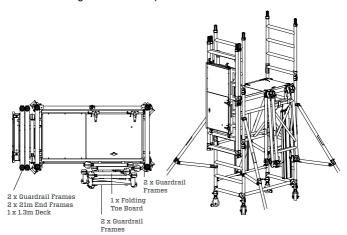


WARNING: ASSEMBLY BRACKETS ARE DESIGNED AND INTENDED ONLY TO AID ASSEMBLY AND DISMANTLING.


Climb the tower from the inside and from a protected position on the trapdoor. Reach to the side bracket and take one camlock guardrail. Position the guardrail on the rear of the tower as shown. All guardrails should fix to the 2nd and 4th rung above the platform deck. Repeat with second camlock guardrail frame on the front of tower to fully secure platform. Engage and lock camlock claws.

DO NOT CLIMB ON TO DECK UNTIL ALL GUARDRAILS ARE IN PLACE.

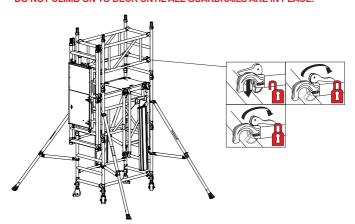


9 Standing up on the protected platform, lift the second trapdoor deck onto the platform. Store by the rear guardrail clear of the

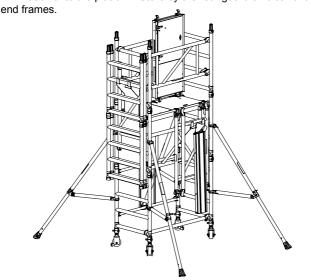


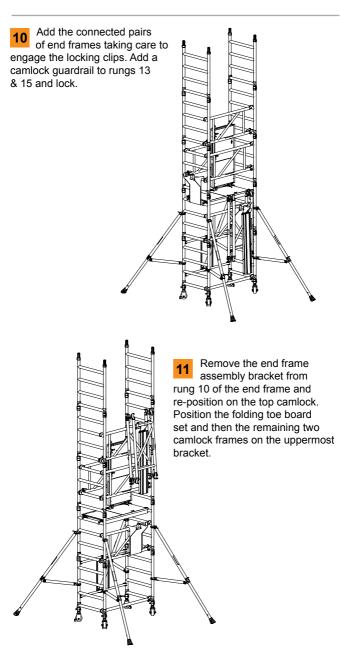

Place the trapdoor deck onto the 16th rung of the tower and engage wind-locks. Climb the end frame from within and from the protected trapdoor position, fit the camlock guardrails as shown.

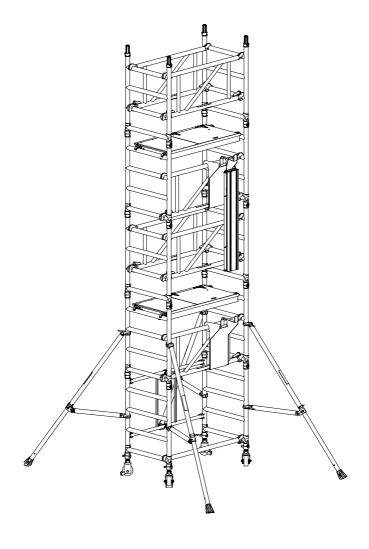

Unclip the storage strap from the folding toe board set, unfold and fit the toe board into position on the working platform. Move assembly brackets to base of the tower and fit to the lowest rungs of the end frames.

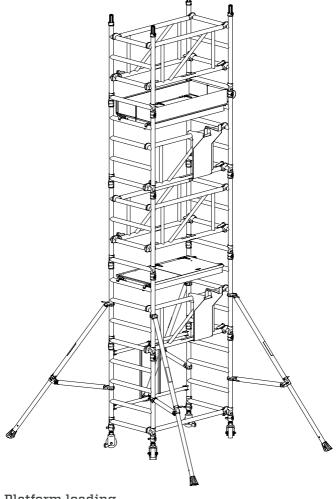


Platform loading

Simply follow the assembly steps in reverse, ensuring that the 3T method is followed.

Storage Trolley Assembly:

1 Assemble the folding base frame with one trapdoor deck placed on the bottom rung forming the base of the trolley.


Lower all adjustable legs as far as possible.

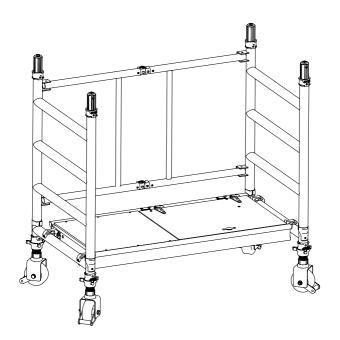


Fit the folding toe board set to the trapdoor deck.

Position the 1.3m horizontal brace on the front upright, just above the 4^{th} rung.


Place the assembly brackets, one at each end on the inside of the folding base unit end frames.

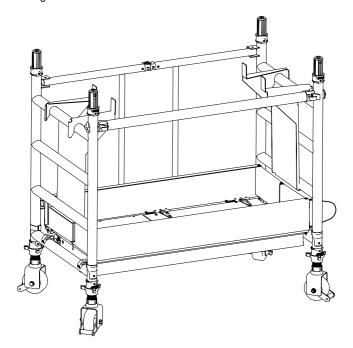


Place the camlock frames, three at either end within the trolley. Ensure the diagonal struts of the camlock frames fit between the arms of the assembly brackets.

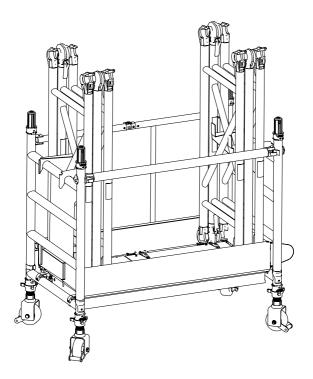

4 Place the 1m end frames in the centre of the trolley between the guardrail frames.

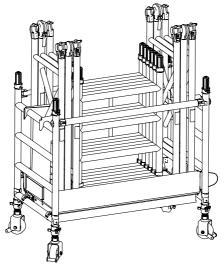

Add the final trapdoor deck in front of the 1m end frames. Fit the four SP4 stabilisers in front of the trapdoor deck. The trolley unit is now complete.

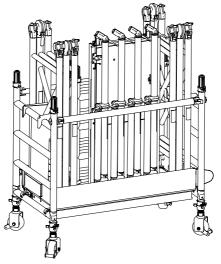

For further information about this product or any other products and services, please contact:

The Causeway, Maldon, Essex, CM9 4LJ, United Kingdom +44 (0)1621 745900 +44 (0)1621 859845

Members of:

