


IQ LIFT

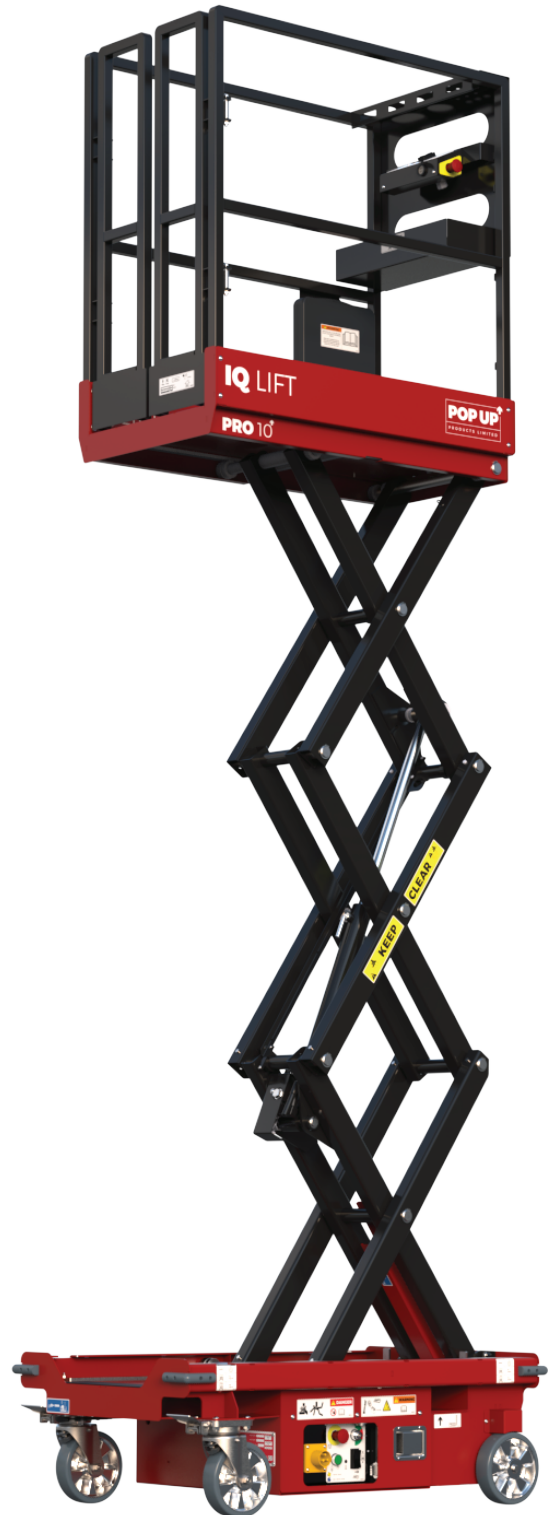

PRO 10[↑]

SN: E21-20001+

IQ2.0-S
REV A



+44 (0)1244 833 933



info@popupproducts.co.uk



popupproducts.co.uk

DECLARATION OF CONFORMITY

DECLARATION OF CONFORMITY

This declaration is issued under the sole responsibility of the manufacturer

Manufacturer's name and full address	Custom Equipment, LLC 2647 Hwy 175 Richfield, WI 53076 USA
Authorised Representative and full address (based in the UK)	Pop Up Products Limited Unit E1, Tenth Avenue Deeside Industrial Park Deeside, Flintshire CH5 2UA
Description and identification of the machinery	
Product / Type	Mobile Elevating Work Platform
Model	IQ LIFT PRO 10
Serial No / Batch No	
This machinery fulfils all the relevant provisions of the Supply of Machinery (Safety) Regulations 2008 (SI 2008/1597) as amended (SI 2011/1043, SI 2011/2157, SI 2019/696).	
This machinery fulfils all the relevant provisions of the Electromagnetic Compatibility Regulations 2016 (SI 2016/1091) as amended (SI 2017/1206, SI 2019/696).	
The following standards have been used	EN 280-1:2022
The machinery has been examined by	 amtri veritas ltd, Veritas House, Pierce Street, Macclesfield, SK11 6ER, UK
Approved Body no.	0463
Certificate no.	AVEX4736
Name and address of the person authorised to compile the technical file (based in the UK)	Pop Up Products Limited Unit E1, Tenth Avenue Deeside Industrial Park Deeside, Flintshire CH5 2UA
Person authorised to make this declaration	
Name	Paul Rogers
Function	Product & Technical Director
Signature	
Place of Declaration	Deeside, Flintshire CH5 2UA
Date of Declaration	14 February 2025

DECLARATION OF STATIC TESTING



DECLARATION OF STATIC TESTING

Manufacturer: Custom Equipment, LLC

Address: 2647 Hwy 175
Richfield, WI 53076
USA

Machine Type: Mobile Elevating Working Platform

Model: IQ Lift Pro 10

Serial No:

Static Test: Overload test at 150% of rated load (360 kg)
Function test at 110% of rated load (265 kg)

We hereby declare the above-mentioned machine fulfils the relevant provisions of the Machinery Directive 2006/42/EC, using "A Guide to the Application of the Machinery Directive 2006/42/EC - Edition 2.1 July 2017" and taking guidance from EN 280-1:2022.

Signed:

A handwritten signature in black ink, appearing to read "Mac Abfall".

Date:

14 Feb 25

Name:

Mac Abfall

Position:

Engineering VP

The above-named person is empowered to sign on behalf of the manufacturer and/or his Authorised Representative in the Community

NOTE. Any modifications to the above described machine violates the validity of this declaration



FOREWORD

Original instructions are written in English.

The purpose of this Operations and Safety Handbook is to provide users with the instructions and operating procedures essential to properly and safely operate the Mobile Elevating Work Platform for its intended purpose.

This handbook is considered part of the machine and must be stored on the machine at all times.

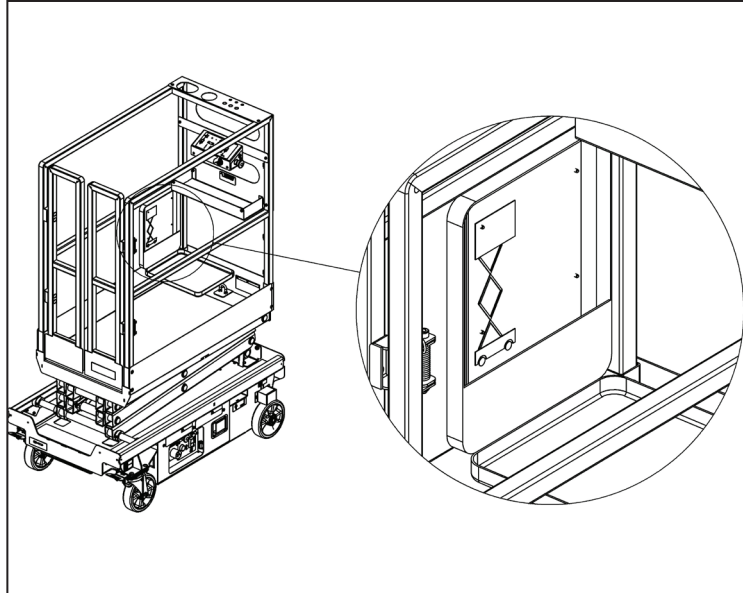


FIGURE 1: Handbook Storage Location



THE OPERATION AND SAFETY HANDBOOK MUST BE READ AND UNDERSTOOD PRIOR TO OPERATING THE MACHINE.

- The user/operator should not accept operating responsibility until the handbook has been read and understood as well as having operated the MEWP under supervision of an experienced and qualified operator.
- Because the manufacturer has no direct control over machine application and operation, proper safety practices are the responsibility of the user and all operating personnel.

If there is a question about application and/or operation, contact:

Pop Up Products Limited
Unit E1, Tenth Avenue
Deeside Industrial Park
Deeside
Flintshire CH5 2UA

Tel. +44(0) 1244 833 933

E-mail - support@popupproducts.co.uk
Website - popupproducts.co.uk

Fall Protection Notice:

The guardrail system around the perimeter of the platform is the fall protection system for Mobile Elevating Work Platforms per the MEWP standard. It is prohibited to use this MEWP with any portion--or all--of the guardrails removed. Anchorage points are provided for work positioning restraints only. Lanyard lengths are to be determined by the operator/owner to restrict the operator to the confines within the guardrail system.

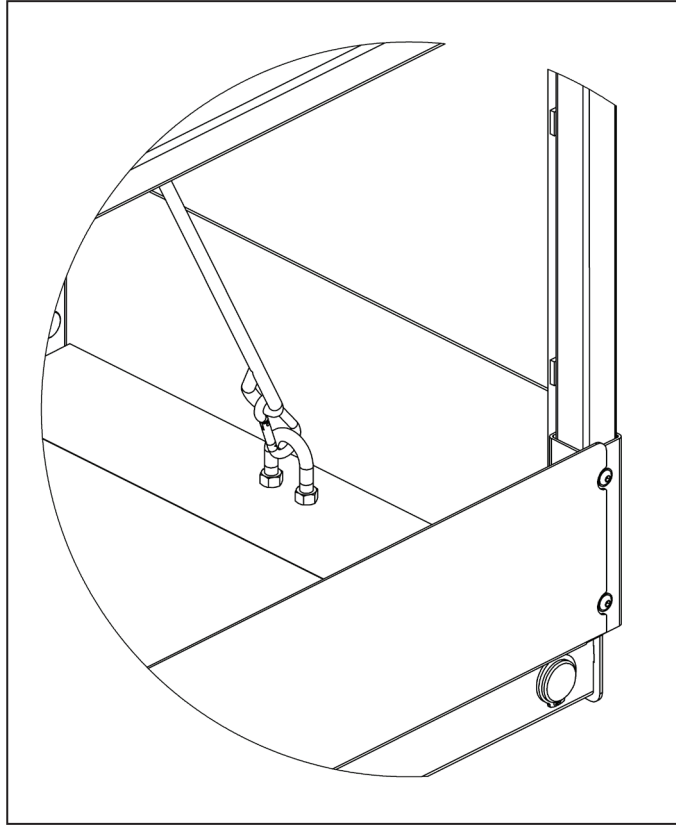


FIGURE 2: Anchorage



WARNING

USE OF FALL ARREST SYSTEMS ATTACHED TO ANCHORAGE POINTS ON EQUIPMENT MAY CAUSE THE MACHINE TO TIP, RESULTING IN SERIOUS INJURY OR DEATH.

TABLE OF CONTENTS

DECLARATION OF CONFORMITY2

DECLARATION OF STATIC TESTING.....3

FOREWORD4

FALL PROTECTION5

TABLE OF CONTENTS6

INDEX OF FIGURES.....7

SECTION 1 | PRODUCT DESCRIPTION8

1.1 | PRODUCT INFORMATION.....8

1.2 | MACHINE SPECIFICATIONS9

SECTION 2 | SAFETY.....10

2.1 | SAFETY SYMBOLS.....10

2.2 | GENERAL RULES AND PRECAUTIONS.....10

2.3 | SAFETY CONTROLS & INDICATORS.....13

SECTION 3 | TRANSPORT, HANDLING, & STORAGE.....16

3.1 | PRELIMINARY UNPACKING INSTRUCTIONS AND DEALER INSPECTION16

3.2 | STORAGE.....16

3.3 | PREPARATION FOR TRANSPORT.....16

3.4 | FORK LIFT POCKETS.....16

3.5 | LIFTING AND TIE-DOWN POINTS.....17

SECTION 4 | DECALS.....18

4.1 | DECAL LOCATIONS18

4.2 | DECAL SYMBOL MEANINGS20

SECTION 5 | OPERATION.....24

5.1 | BEFORE YOU OPERATE.....24

5.2 | WHEN WORK IS FINISHED25

5.3 | OPERATING CONTROLS & INDICATORS26

SECTION 6 | DAILY MAINTENANCE.....28

6.1 | DAILY MAINTENANCE.....28

6.2 | BATTERY CHARGING29

SECTION 7 | APPENDIX.....30

7.1 | PRE-START INSPECTION CHECKLIST30

NOTES31

INDEX OF FIGURES

FIGURE 1: Handbook Storage Location4

FIGURE 2: Anchorage.....5

FIGURE 3: Maintenance Lock.....11

FIGURE 4: Descent Warning Light13

FIGURE 5: Emergency Lowering.....13

FIGURE 6: Automatic Brake.....14

FIGURE 7: Fork Lift Pockets16

FIGURE 8: Tie-Down17

FIGURE 9: Example Sling/Lifting.....17

FIGURE 10: Centre of Gravity.....17

FIGURE 11: Decal Locations.....18

FIGURE 12: Parking Brake.....24

FIGURE 13: Padlock Example.....25

FIGURE 14: Platform Controls26

FIGURE 15: Ground Controls.....27

FIGURE 16: Battery Charger Connection and Charger Light Locations.....29

SECTION 1 | PRODUCT DESCRIPTION

1.1 | PRODUCT INFORMATION

Pop Up Products' IQ Lift is a Mobile Elevating Work Platform designed to be safe and reliable. The purpose of the machine is to elevate personnel, along with their necessary tools and materials. The machine is intended for indoor use (no wind load). Manufacturer approval is required for any use other than the intended use.



ANY MODIFICATION OF THIS MACHINE WITHOUT THE EXPRESS WRITTEN CONSENT OF THE MANUFACTURER IS PROHIBITED.

1.2 | MACHINE SPECIFICATIONS

IQ LIFT	
Working Height (maximum)	4.97 m
Platform Height (maximum)	2.97 m
Stowed Height	1.75 m
Ground Clearance	66 mm
Overall Width	0.75 m
Overall Length	1.30 m
Work Platform	0.52 m x 1.04 m
Guard Rail Height	1.1 m
Toe Board Height	150 mm
Platform Entrance	0.64 m
Step Height	0.33 m
Wheel Base	1.01 m
Wheel Track	0.65 m
Turning Radius (Inside)	0 mm
Tyre Size (Solid, Non-Marking) - Front	200 mm
Tyre Size (Solid, Non-Marking) - Rear	200 mm

Rated Load	
Lift Capacity	240 kg 1 person + 160 kg tools and materials
Horizontal/Manual Force	200 N

Floor Loading*	
Machine Weight (Unloaded) (Approx.)	390 kg
Minimum Wheel Load — Contact Pressure	17.2 kg/ cm ²
Maximum Wheel Load — Contact Pressure	21.8 kg/ cm ²
Minimum Machine Loading — Floor Pressure	4.5 kPa
Maximum Machine Loading — Floor Pressure	5.7 kPa

*Machine Weight and Floor Loading may increase with some options (ex. battery)

Environmental limitations	
Wind	Indoor Use Only: 0 m/s
Rated Slope	1.5°
Temperature	-20° C to 40° C
Vibration	Hand/Arm: 2.5 m/s ² max Whole Body: 0.5 m/s ² max
Sound Pressure Level at Workstation	86 dB Normal Use/100dB Alarms
Lift/Lower Speed	18 s / 20 s
Hydraulic Pressure (max)	12.4 MPa
Hydraulic Fluid Capacity	2.8 L
Power System — Voltage	12 V DC
Batteries — Deep Cycle Marine	(1) 12V, Group 24 WET CELL OR AGM



SECTION 2 | SAFETY

2.1 | SAFETY SYMBOLS

Warnings and instructions that have a direct impact on safety are identified with the following signals:



**FAILURE TO FOLLOW THIS WARNING WILL
CAUSE DEATH OR PERSONAL INJURY.**

“DANGER” indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.



**FAILURE TO FOLLOW THIS WARNING MAY
CAUSE DEATH OR PERSONAL INJURY.**

“WARNING” indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury



**FAILURE TO FOLLOW THIS WARNING MAY
CAUSE INJURY OR DAMAGE TO EQUIPMENT.**

“CAUTION” indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury or damage to equipment

2.2 | GENERAL RULES AND PRECAUTIONS

An operator of any type of work platform is subject to certain hazards that cannot be protected by mechanical means. It is therefore essential that operators be competent, careful, physically and mentally fit, and thoroughly trained in safe operation of this machine. It is the responsibility of the owner to instruct operators with the safety requirements made not only in this handbook, but by the various safety bodies in your area, as well as additional requirements set forth by BS EN:280. If you come across a situation that you think might be unsafe, stop the platform and request further information from qualified sources before proceeding.

Noise and vibration do not create significant hazards on this machine.



**DO NOT OPERATE MACHINE NEAR POWER LINES. THE PLATFORM
AND ENCLOSURES ARE NOT INSULATED.**



NEVER REACH BETWEEN SCISSORS LINKS OR PROP UP PLATFORM.

Maintenance Lock

The maintenance lock must be placed into position whenever the machine is being serviced in a partially raised position. Serious injury and/or death could result if maintenance lock is not used properly.

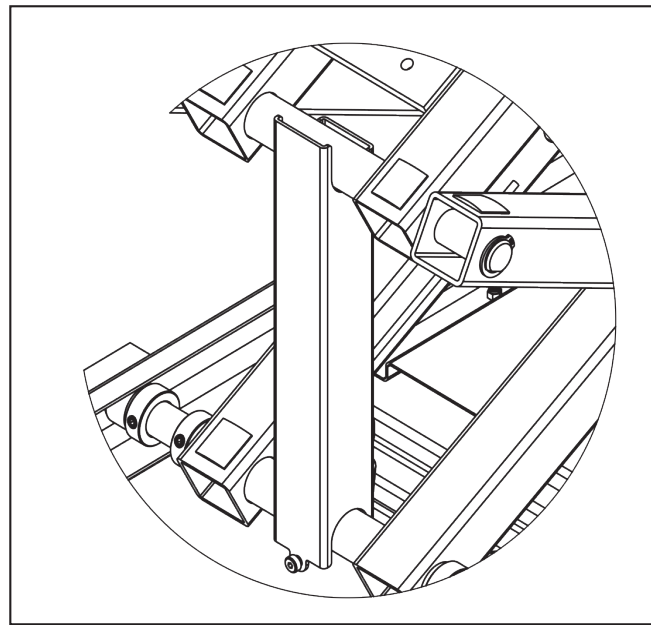
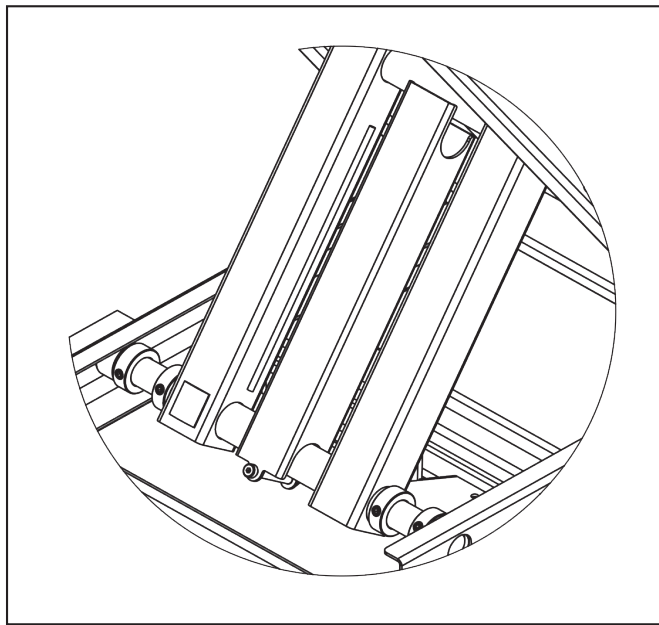


FIGURE 3: Maintenance Lock

Only qualified operators may operate this unit.

ALWAYS	read and understand the Operation and Safety Handbook before operating.
ALWAYS	understand all decals and warning labels on unit.
ALWAYS	prevent unauthorised use; when unit is not in use, remove key.
ALWAYS	wear necessary approved personal protective equipment (PPE), i.e. head gear.
ALWAYS	report any misuse of equipment to proper personnel.
NEVER	work on platform if your physical condition is such that you feel dizzy or unsteady.

Use machine only for purposes for which it was intended.

ALWAYS	distribute load evenly over platform floor area.
NEVER	use the lift as a crane (by suspending a load from the platform).
NEVER	exceed the load capabilities of the platform. (See the "Product Description" section of this handbook)
NEVER	use unit as electrical grounds for arc welding.
NEVER	override any hydraulic, mechanical, or electrical safety devices.

Check job site for unsafe working conditions.

ALWAYS	watch out for others. Keep others clear of operating platform.
ALWAYS	avoid contact with fixed (buildings, etc.) or moving (vehicles, cranes, etc.) objects. Check work area for overhead obstructions or possible hazards.
ALWAYS	follow any applicable national traffic regulations.
ALWAYS	be on hard level surface before elevating.
ALWAYS	maintain a clearance between any part of the machine, or its load, and any electrical line or apparatus. Follow local power line clearance regulations.
NEVER	allow others to pass under a raised platform or position the platform over someone.
NEVER	use outdoors. Lift is not designed for windy conditions or electrical storms.
NEVER	operate on incline or uneven surface.
NEVER	operate machine near power lines. The platform and enclosures are not insulated.
NEVER	move the unit on a slope steep enough that the unit may become uncontrollable.

Equipment is only as safe as the operator.

ALWAYS	make sure entry gate is secured before operating machine from the platform.
ALWAYS	secure tools and materials.
ALWAYS	maintain a firm footing on the platform floor and work only within the platform area.
NEVER	use ladders or scaffolding on the platform to obtain greater height.
NEVER	enter or exit platform while machine is in motion.
NEVER	mount or dismount a raised platform.
NEVER	move the unit when in the elevated position.
NEVER	move the unit with a person on the platform.
NEVER	belt or tie off to an adjacent structure.

Before operation, ensure that the machine is properly serviced.

ALWAYS	perform inspections and preventative maintenance at the recommended intervals. (See the "Maintenance" section of this handbook)
ALWAYS	use the maintenance lock when performing all types of maintenance procedures.
NEVER	use machine if it is not working properly.
NEVER	smoke while charging the battery.

2.3 | SAFETY CONTROLS & INDICATORS

Emergency Stop

This lift is equipped with two emergency stop switches, one at the platform control and one at the base control, that when activated, will render the unit inoperable until reset. To reset, pull the button out. (See the “Operating Controls & Indicators” section of this handbook for more detail.

Descent Alarm & Lowering Interrupt

An audible alarm sounds when the machine is lowering.

When lowering the platform, the platform will stop when the ends of the scissors are 50 mm apart for 3 seconds. The beacon light flashes to indicate the armguard delay. Release. Look around all sides of the scissors to check for persons at risk. Then continue lowering the platform.

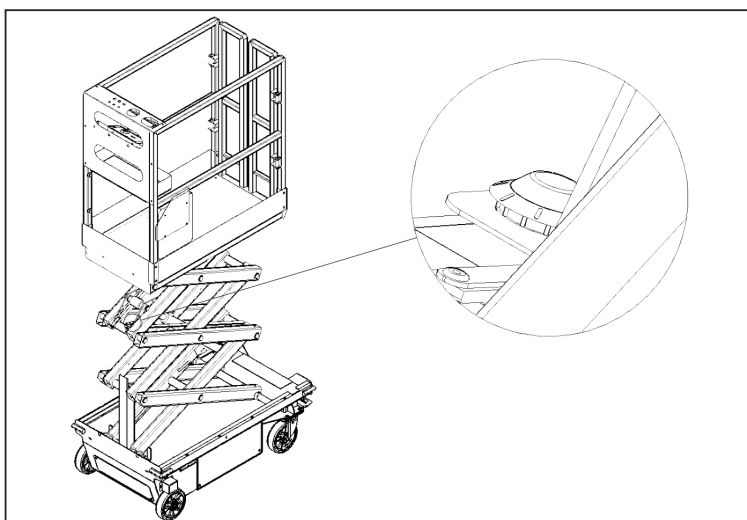


FIGURE 4: Descent Warning Light

Descent Manual Override (Emergency Lowering)

For manually lowering the scissors, a manual valve is provided. To lower the scissors, pull the cable located near the rear of the machine.

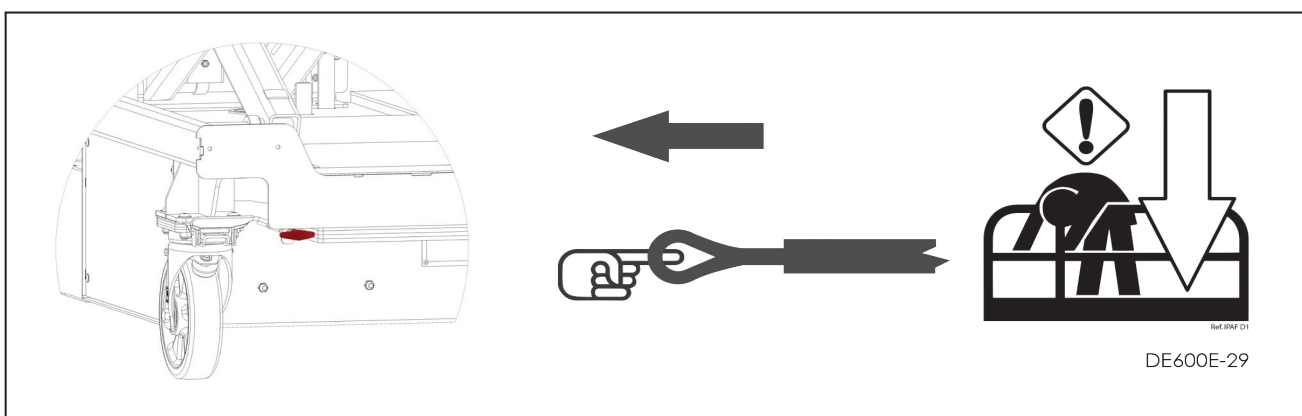


FIGURE 5: Emergency Lowering



WARNING

IF PLATFORM SHOULD FAIL TO LOWER, DO NOT ATTEMPT TO CLIMB DOWN THE SCISSOR ASSEMBLY. SERIOUS INJURY MAY RESULT. HAVE AN EXPERIENCED OPERATOR USE THE EMERGENCY LOWERING PROCEDURE TO SAFELY LOWER THE PLATFORM.



Tilt Sensor

If the chassis is tilted more than 1.5°, elevating function is prevented, and an alarm sounds. Lower the platform and move to a hard, level surface before elevating.

Load Sensing

Movement is inhibited when the load exceeds the rated load and elevating is attempted from the stowed position. When the platform is stowed, the overload indicator lights up to indicate that the load control system is functional. Then attempting to elevate, if the load is less than rated load, the light will stop, and elevating may continue. If the rated load is exceeded, the light will continue and the platform will not elevate. Remove the excess load before continuing operation.

Automatic Brakes

When elevated, a brake is automatically applied to the rigid wheels. The manual parking brake on the swivel castors should also be used. (See the “Operation” section of this handbook).

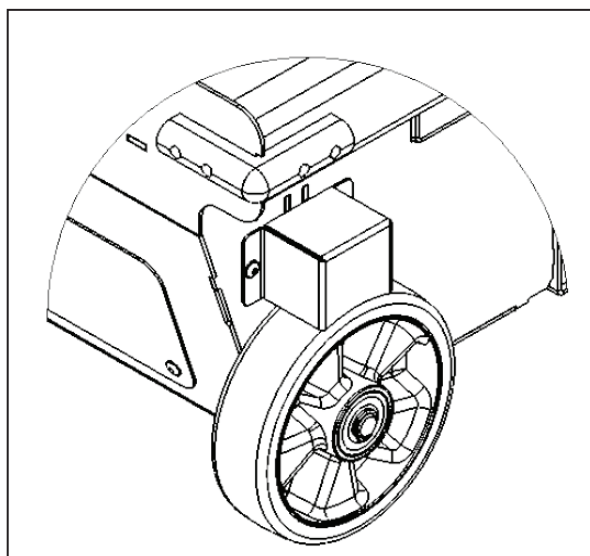


FIGURE 6: Automatic Brake

THIS PAGE WAS INTENTIONALLY LEFT BLANK

SECTION 3 | TRANSPORT, HANDLING, & STORAGE

3.1 | PRELIMINARY UNPACKING INSTRUCTIONS AND DEALER INSPECTION

Maintenance locks must be engaged prior to inspecting or servicing the unit when the platform is elevated. Inspect machine for any possible damage during shipment; perform a Pre-Delivery Inspection. See checklist in the Maintenance & Troubleshooting Handbook. Reset emergency stop switches, if necessary.

3.2 | STORAGE

After periods of storage, exposure to extremes of ambient conditions-heat, cold, moisture, dust etc., inspect the machine. Refer to the Pre-Delivery/Frequent Inspection Checklist in the Maintenance & Troubleshooting Handbook.

3.3 | PREPARATION FOR TRANSPORT

- Lower the work platform to the down position.
- Turn key switch to off position.
- Check entire machine for loose or unsecured items. Remove any loose items from machine.
- For safety and controlled handling, it is not recommended to move the unit on a slope greater than 5°. Apply manual brake lock on rear castors.

3.4 | FORK LIFT POCKETS

Fork lift pockets are provided on the side of the unit for loading and unloading. When moving machine with a forklift, do not let machine slide along floor. Bring forklift to a stop and then gently lower the machine.

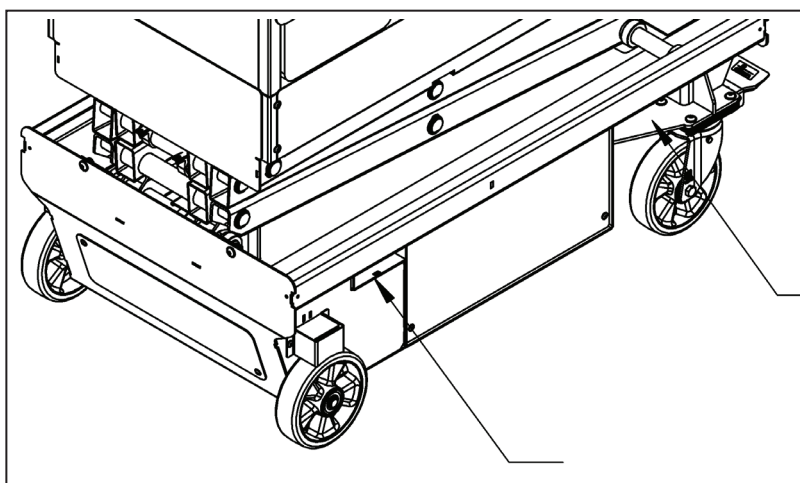


FIGURE 7: Fork Lift Pockets

3.5 | LIFTING AND TIE-DOWN POINTS

Tie-down points are provided in the front and rear of the machine for securing the machine on a trailer or truck bed for transport between places of use. They may also be used as lift points.

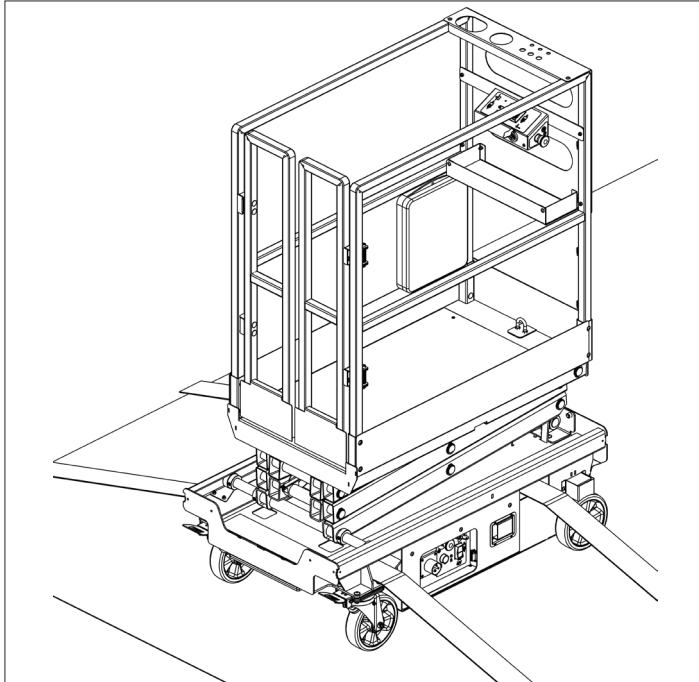


FIGURE 8: Tie-Down

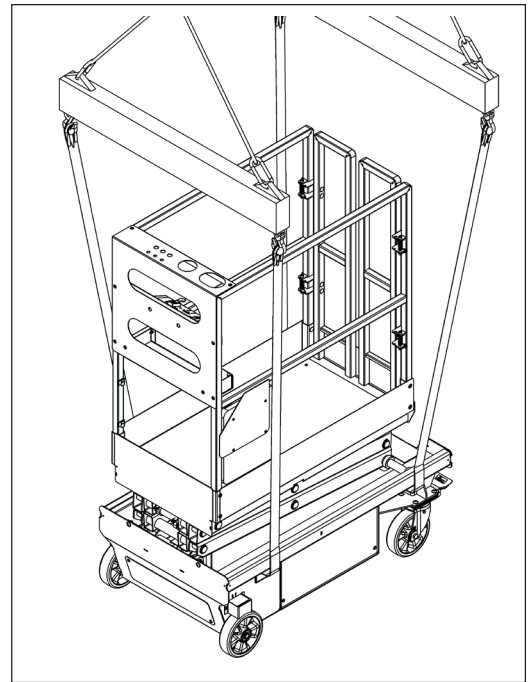


FIGURE 9: Example Sling/Lifting

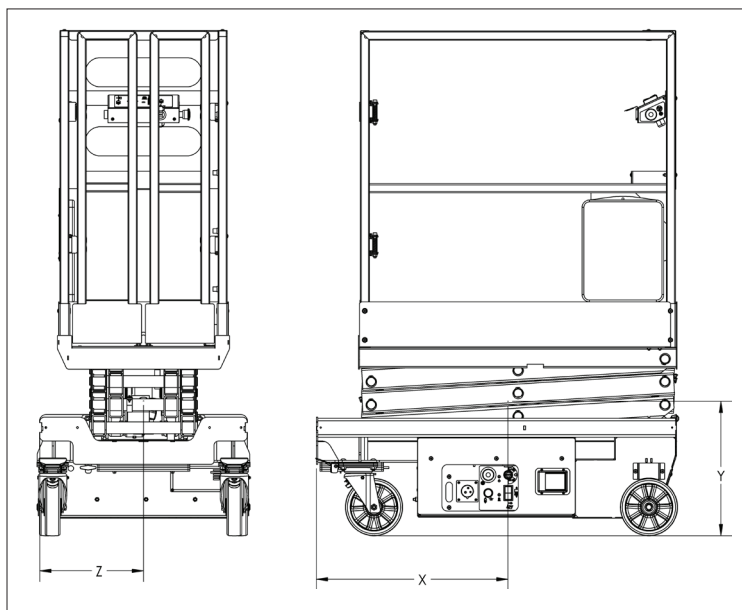


FIGURE 10: Centre of Gravity

Centre of gravity:

X: 67 cm

Y: 47 cm

Z: 36 cm

SECTION 4 | DECALS

4.1 | DECAL LOCATIONS

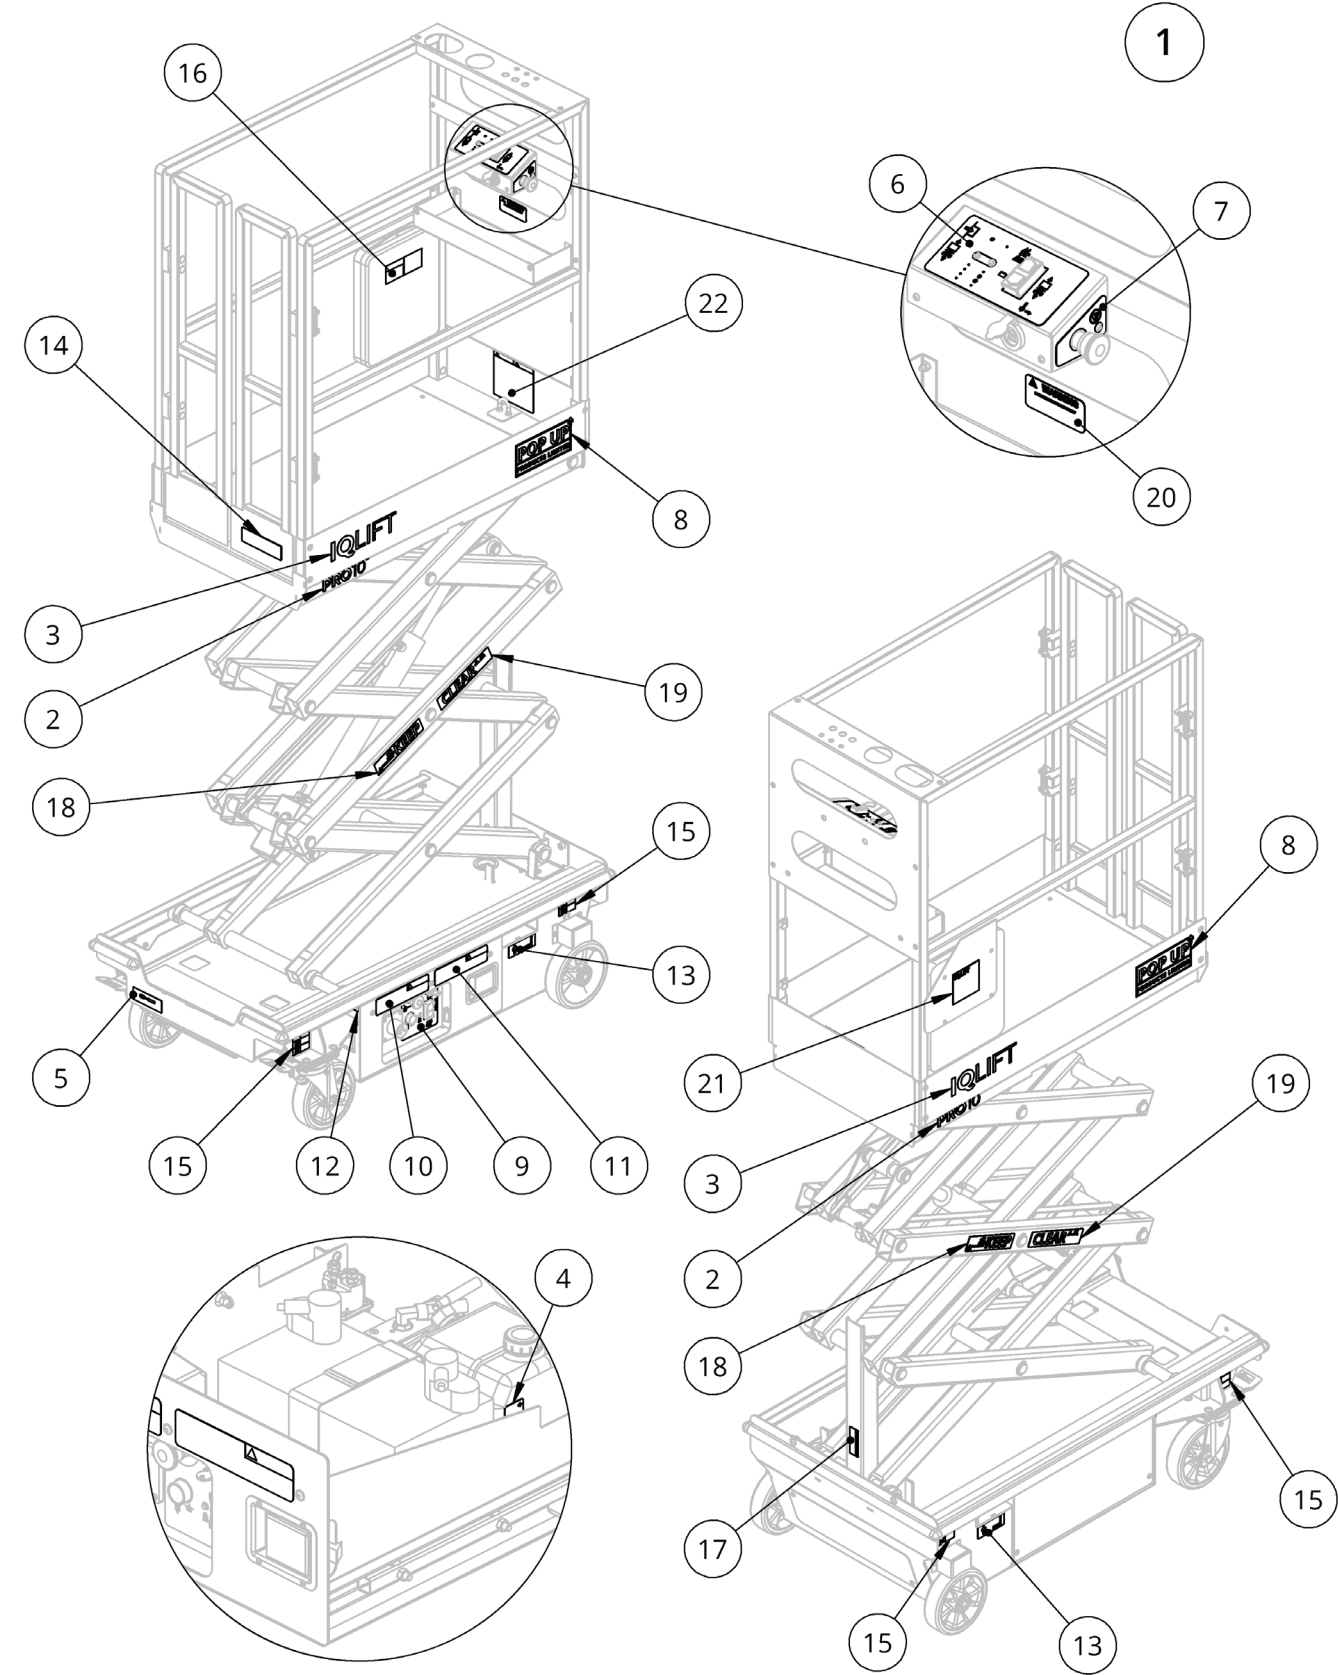
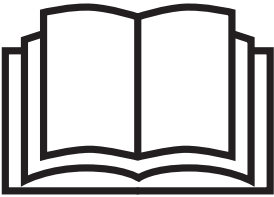
 
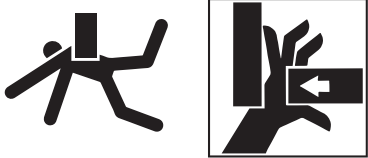
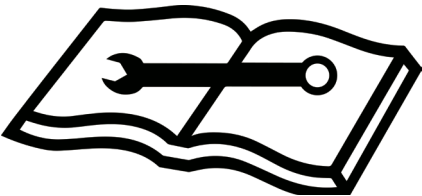
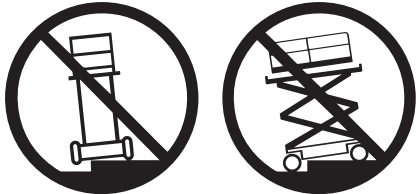
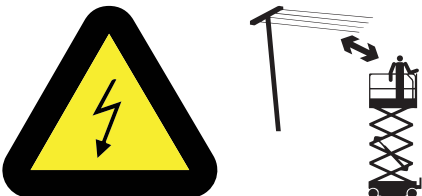
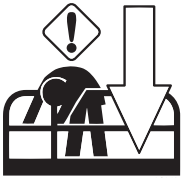


FIGURE 11: Decal Locations



ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	177-21-008-50-K	DECALS,IQ LIFT PRO 10	1
2	DE603-18	DECAL,MODEL PRO 10	2
3	DE603-19	DECAL,MODEL IQ LIFT	2
4	DE679	DECAL,HYDR FLUID	1
5	DE751	DECAL,E-DOWN CABLE	1
6	DE812	DECAL,CTL UPR	1
7	DE813	DECAL,CTL UPR E-STOP	1
8	DE814	DECAL,LOGO POP-UP	2
9	DE815	DECAL,CTL LWR IQ LIFT	1
10	DE816	DECAL,LWR DANGERS	1
11	DE817	DECAL,LWR WARNINGS	1
12	DE818	DECAL,FORK	2
13	DE819	DECAL,FORK	2
14	DE828	DECAL,CAPACITY,530#,1P,I,WO/SO	1
15	DE829	DECAL,WHEEL LOAD IQ PRO 10	4
16	DE830	DECAL,MANUAL BOX	1
17	DE831	DECAL,MAINT LOCK	1
18	DE832	DECAL,KEEP	2
19	DE833	DECAL,CLEAR	2
20	DE835	DECAL,CAPACITY, TOOL TRAY	1
21	DE843	DECAL, INFO IQ LIFT (CE &UKCA)	1
22	DE852	DECAL,TOE BOARD,IQ	1

4.2 | DECAL SYMBOL MEANINGS

Symbol	Meaning
	- No Unauthorized Use - Do not operate this machine unless you have been trained in safe operation. - Training includes complete knowledge of the safety and operating instructions contained in the manufacturer's handbook, your employer's work rules, and applicable government regulations. - An untrained operator subjects himself and others to death or serious injury.
	- Read and understand all dangers and warning in the Operations & Safety Handbook before operating this machine. - Improper use of this machine could cause death or serious injury. - Inspect machine and make sure that it is operating properly, that all name plate and hazard signs are in place and legible, and that the machine is in accordance with the manufacturer's maintenance requirements contained in the operating and maintenance handbook and the daily safety checklist.
	- Lanyard anchorage point location. Capacity 1 person. - Lanyard anchorage points are for work positioning restraints only. - Use of fall arrest systems attached to anchorage points on mobile - Equipment may cause machine to tip, resulting in serious injury or death.
	- Crushing Hazard - Do not enter the space beneath the work platform or scissor structure unless the maintenance lock is in place.
	- Refer to Maintenance & Troubleshooting Handbook - Only qualified service personnel may service the machine. Failure to comply with listed safety precautions may result in machine damage, personnel injury, or death. - Replace designated items with manufacturer's specified equipment only. Failure to use these items may cause instability and could void the Warranty.
	- Batteries produce explosive gas. Charge batteries in a well-ventilated area. - Do not expose to sparks or flames. - Do not smoke while charging battery.
 110V AC / 50 HZ 230V / 240V AC / 50 HZ	Battery Charger Power Inlet
	Tip Hazard

Symbol	Meaning
	• Tip Hazard • Do not elevate platform on a slope
	• Tip Hazard • Do not elevate platform on a slope.
	• Tip Hazard • Do not elevate platform on uneven or soft surfaces.
	• Indoor Use Only: No Wind Load
	• Electrocuting Hazard • This machine is not insulated. • Maintain safe clearance from electrical lines and apparatus. You must allow for machine sway, rock or sag and electrical lines swaying. • This machine does not provide protection from contact with or proximity to an electrically charged conductor. • You must maintain a clearance between any part of this machine or its load and any electrical apparatus. Follow local power line regulations. • Death or serious injury will result from contact or inadequate clearance.
	• Emergency Lowering
	• For safety and controlled handling, it is not recommended to move the unit on a slope greater than 5°.

SECTION 4 | DECALS

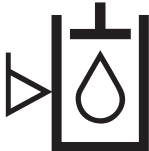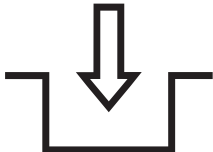Symbol	Meaning
	Fork pocket
	Hydraulic oil level
	Hydraulic oil level

THIS PAGE WAS INTENTIONALLY LEFT BLANK

SECTION 5 | OPERATION

5.1 | BEFORE YOU OPERATE

Before use each day or at the beginning of each shift, the machine shall be given a visual inspection and functional test. Repairs (if any) must be made prior to operating the machine, as it is critical to ensure safe operation of the machine. A checklist for pre-start inspection can be found in the Daily Maintenance section of this handbook.



**THE OPERATOR MUST BE AWARE OF THE ENVIRONMENT.
DO NOT RAISE THE PLATFORM IF THE MACHINE IS NOT ON A FIRM,
LEVEL SURFACE.**

- Check that the work area is safe.
- It is not recommended to maneuver the unit on a slope greater than 5°.
- Machine must be on a hard, level, surface before operation.
- Engage the manual brakes on the rear castors before elevating the platform.

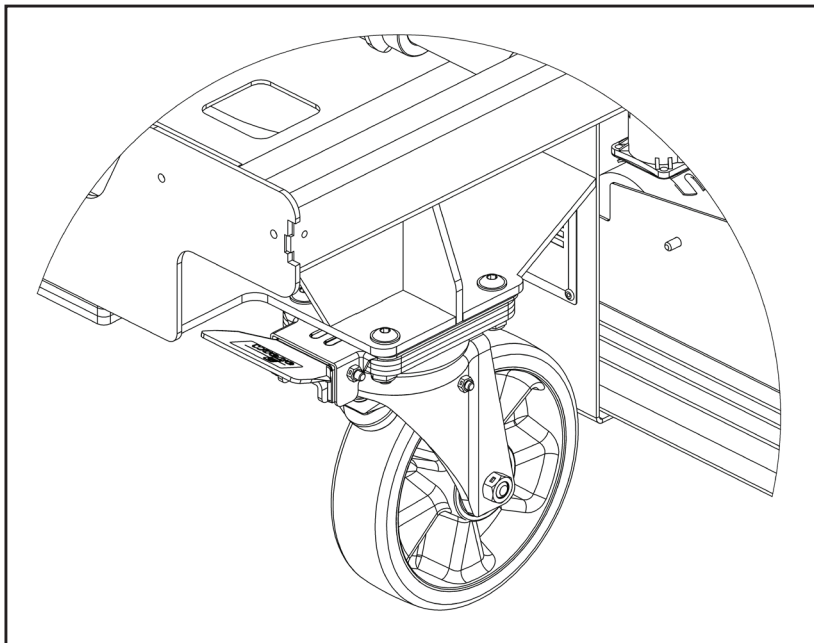


FIGURE 12: Parking Brake

- Ensure that the key in the lower control panel is in the “ON” position for the chassis or platform control.
- Enter the work platform in the stowed position using the constant three point contact method.
- Follow all general rules and precautions stated in this handbook.

5.2 | WHEN WORK IS FINISHED

- When finished with the machine, place the platform in the stowed position.
- Carefully exit the platform using the constant three point contact method.
- NEVER JUMP OFF PLATFORM.
- Park the machine on a level surface.
- Ensure that the manual brakes (on the rear castors) are engaged.
- Remove key from ground control panel to prevent unauthorised use. The key may be padlocked in the handbook box to secure in the isolated position.

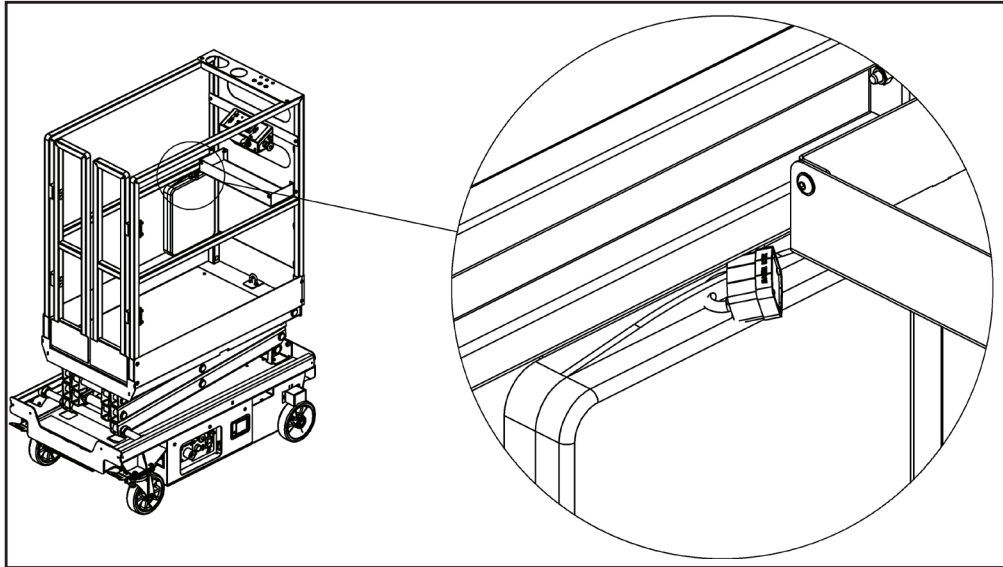


FIGURE 13: Padlock Example

5.3 | OPERATING CONTROLS & INDICATORS

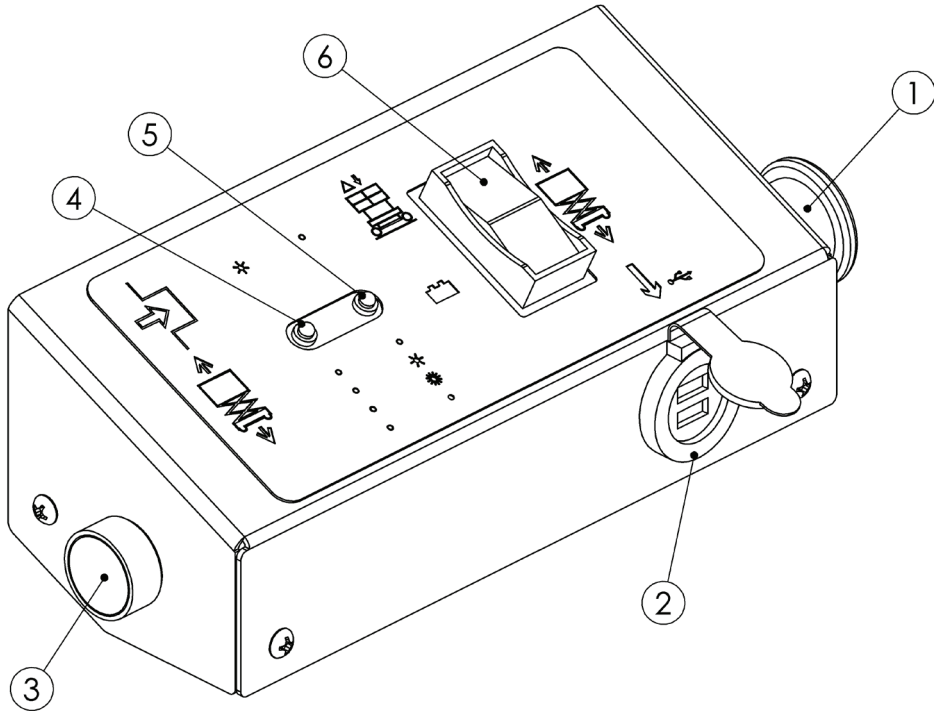


FIGURE 14: Platform Controls

Item	Control/Indicator
1	Emergency Stop Button Push in to stop all motion. Pull out to reset.
2	USB Power Port
3	Enable Button Push in to enable elevate and lower motion.
4	Overload Indicator Light Illuminates when stowed, beginning to elevate and checking for overload. If machine does not continue elevating and: Battery Indicator Light is on, the charge before continuing operation. Battery Indicator Light is off, remove excess load before continuing operation.
5	Battery Indicator Light Gives an approximate indication of battery charge:  Not Illuminated: 100% to 40%  Slow Flash: 40% to 20%  Fast Flash: 20% to 10%  Steady: Less than 10%
6	Elevate/Lower Switch Push the top part of the rocker to elevate or the lower part to descend.

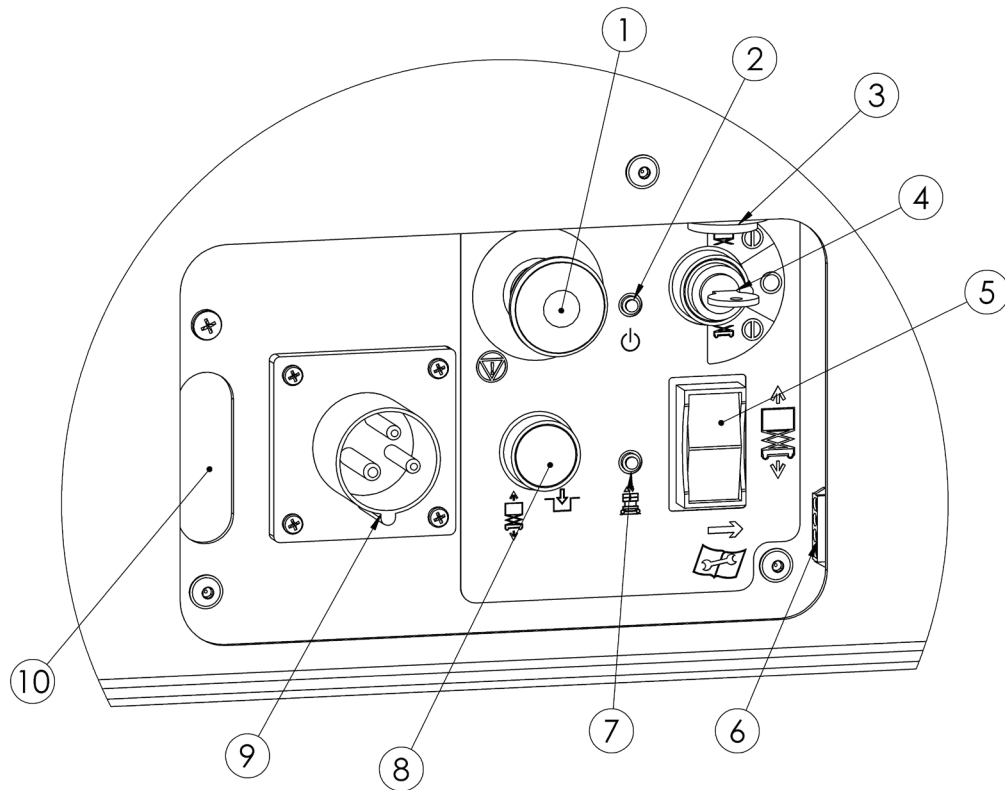


FIGURE 15: Ground Controls

Item	Control/Indicator
1	Emergency Stop Button Push in to stop all motion. Pull out to reset.
2	Power Indicator Light Illuminates when power is on.
3	Alarm Alarm sounds for descent, descent delay, or warning that machine is on a slope.
4	Key Switch Rotate the key to select Off, Platform or Ground Controls. Remove key to prevent unauthorised access.
5	Elevate/Lower Switch Push the top part of the rocker to elevate or the lower part to descend.
6	Diagnostic Connection Port Used for connecting EZ Cal diagnostic tool.
7	Overload Indicator Light Illuminates when stowed, beginning to elevate and checking for overload.
8	Enable Button Push in to enable elevate and lower motion.
9	Battery Charger Port See the "Battery Charging" section of this handbook.
10	Charger Light Window See the "Battery Charging" section of this handbook.

SECTION 6 | DAILY MAINTENANCE

6.1 | DAILY MAINTENANCE

Failure to perform inspections and preventative maintenance at recommended intervals may result in the unit being operated with a defect that may result in injury or death of the operator. Regular inspection and conscientious maintenance is important to efficient economical operation of this machine. It will help to assure that equipment will perform satisfactorily with a minimum of service and repair. Make checks at the stated intervals or more frequently if required by local operating conditions. A Pre-Start Inspection Checklist is included in this handbook.

Additional maintenance for use by trained personnel is included in a separate Maintenance & Troubleshooting Handbook. Refer to the Maintenance & Troubleshooting Handbook for Pre-Delivery/Frequent and Monthly Checklists and replacement part information.

6.2 | BATTERY CHARGING

This unit is equipped with a deep cycle 12-volt battery. The care and maintenance of your battery has much to do with how well this unit functions. Battery wiring should be checked monthly.

Note: The surrounding temperature greatly affects the power reserve within a battery.

EXAMPLE: A battery that is 100% charged at 27°C drops to 65% at 0°C. At -18°C, this battery will drop to 40% efficiency.



LEAD-ACID BATTERIES GENERATE EXPLOSIVE GASES. KEEP SPARKS AND FLAME AWAY FROM BATTERIES. DO NOT SMOKE WHILE CHARGING.

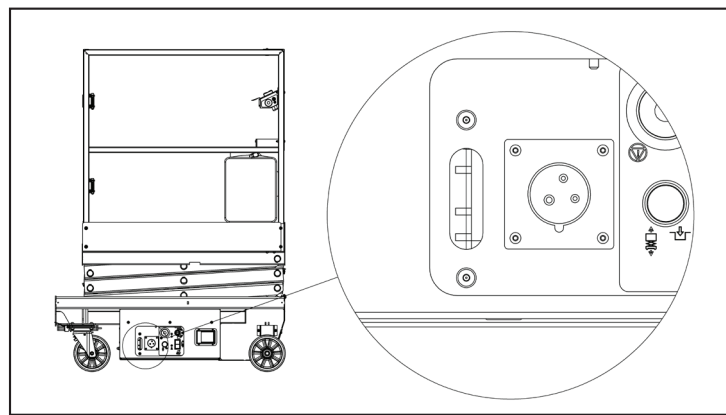


FIGURE 16: Battery Charger Connection and Charger Light Locations

Battery Charge Light Display

POWER	BATTERY 1 STATUS	
	CHARGING	READY
Green LED (ON)	Red LED (OFF)	Green LED (ON)

This display indicates that the power is on but there is no connection to a battery. The charger must see approximately five (5) volts on a battery to deliver D/C current.

POWER	BATTERY 1 STATUS	
	CHARGING	READY
Green LED (ON)	Red LED (ON)	Green LED (OFF)

This display indicates that power is on and that both outputs are delivering D/C current to the batteries.

POWER	BATTERY 1 STATUS	
	CHARGING	READY
Green LED (ON)	Red LED (OFF)	Green LED (ON)

This display indicates that power is on and that the output is finished charging and is in a float maintenance model.

SECTION 7 | APPENDIX

7.1 | PRE-START INSPECTION CHECKLIST

Pre-start Inspection (Push-Around Models)



THIS CHECKLIST MUST BE USED AT THE BEGINNING OF EACH SHIFT OR AFTER EVERY SIX TO EIGHT HOURS OF USE. FAILURE TO DO SO COULD AFFECT THE SAFETY OF THE OPERATOR.

Model: _____ Serial Number: _____

- Keep inspection records up-to-date.
- Record and report all discrepancies to your supervisor.
- A dirty machine cannot be properly inspected.

Y-Yes/Acceptable N-No/Unacceptable R-Repaired	Y	N	R
VISUAL INSPECTIONS			
Check that there are no damaged, dented, or bent structural members	☐	☐	☐
There are no loose or missing parts.	☐	☐	☐
Check that warning and instructional labels are legible and secure.	☐	☐	☐
Check the platform rails and safety gate for damage.	☐	☐	☐
Check that platform floor is clean to prevent slip, fall hazards	☐	☐	☐
Platform and base controls are not missing, damaged, frayed, or disconnected.	☐	☐	☐
Hydraulic hoses are not torn or loose, and there are no leaks. Check that hoses and cables have no worn areas or chafing.	☐	☐	☐
Check the tyres for damage.	☐	☐	☐
Check that all snap rings are secure in grooves on pivot pins.	☐	☐	☐
FUNCTIONAL TESTS	Y	N	R
Gate closes automatically	☐	☐	☐
Platform Controls: Check all switches and push buttons for proper operation.			
Emergency Stop (Stops all movement)	☐	☐	☐
Up/Down Controls (Elevates, Lowers, Enable button must be pressed).	☐	☐	☐
Base Controls: Check all switches and push buttons for proper operation.			
Emergency Stop (Stops all movement)	☐	☐	☐
Key Switch (Selects Platform Control, Ground Control, or Off).	☐	☐	☐
Alarm (Not damaged, sounds for descent).	☐	☐	☐
Up/Down Rocker Switch (Elevates/Lowers, Enable button must be pressed).	☐	☐	☐
Lowering Delay (Delay when lowering, re-activate descent switch to continue)	☐	☐	☐
Emergency Lowering functions	☐	☐	☐
Machine will not elevate when on a slope greater than 1.5°	☐	☐	☐
Wheels: Front and rear wheels rotate freely.	☐	☐	☐
Automatic brakes engage and hold when platform is elevated.	☐	☐	☐
Parking Brakes (Swivel Castors) engage and hold	☐	☐	☐

COMMENTS:

Date: _____ Inspected by: _____

PLEASE DUPLICATE THIS PAGE AS NEEDED FOR YOUR OWN USE.

[illegible]



IQ Lift PRO 10
Operations & Safety Handbook

© 2025 Pop Up Products Limited
Unit E1, Tenth Avenue
Deeside Ind Park
Deeside
Flintshire CH5 2UA

Tel.: +44 (0) 1244 833933

E-mail - support@popupproducts.co.uk
Website - popupproducts.co.uk

Revision Date: February, 2025