IMPORTANT SAFETY NOTES




ALWAYS READ THE INSTRUCTIONS BEFORE USING PODIUM



NEVER USE A PODIUM WITH DAMAGED OR MISSING COMPONENTS




NEVER OVERREACH

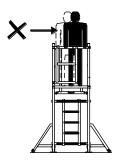


NEVER HAVE MORE THAN ONE PERSON ON THE PLATFORM



NEVER USE ON UNEVEN OR SLOPING SURFACES

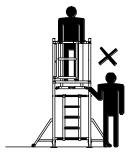


DO NOT MOVE PODIUM IF A PERSON IS STILL ON IT

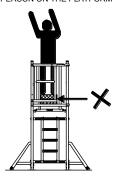

NEVER USE BOXES FOR EXTRA HEIGHT, STAND ONLY ON THE PLATFORM




NEVER USE PODIUMS AS A MEANS OF ACCESS TO ANOTHER PLACE.

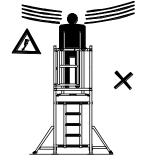


NEVER USE PODIUMS NEAR ELECTRICAL POWER LINES

BE AWARE OF THE FOLLOWING:-



- B. NEVER STAND ON THE ACCESS LADDER TO WORK.
- C. WORKING PLATFORM MUST BE LEVEL.
- D. INSPECT BEFORE USE.
- E. ONLY ASCEND OR DESCEND THE LLWP USING THE ACCESS PROVIDED.
- F. FACE THE FOLDING BACK SECTION WHEN ASCENDING OR DESCENDING.
- G. ENSURE THE GATE IS CLOSED AND LOCKED BEFORE USE.
- H. BEWARE OF FINGER TRAPS.
- J. TO MOVE UNIT UNLOCK GATE AND DISMOUNT, UNLOCK CASTORS AND RE-LOCATE.
- K. IF IN DOUBT DO NOT GUESS CONSULT YOUR SUPPLIER.
- L. SEE OVERLEAF FOR COMPONENT CHECKLIST

1000/1250 AND PAS250 1000/1250 PODIUM ASSEMBLY GUIDE

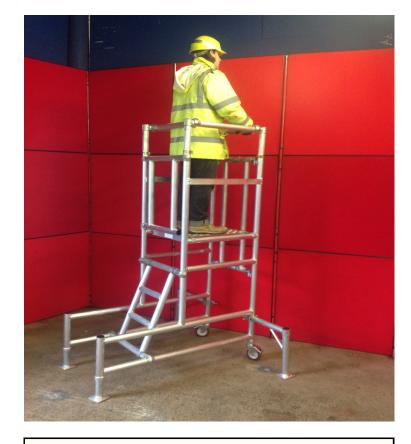

Dimensions — Platform at 1M and 1.25M x Width -0.65M x Depth 1.3M Working Height — 3M and 3.25m (MAX)

Dimensions — Folded Height –2.05M x Width - 0.25M x Depth - 1.3M Weight — MK1 .33KG Safe Working Load - 150kg

PAS 250 MK1 36KG

Manufactured under an ISO9001:2008 Quality System

Complies fully with the Working at Height Regulations 2005 and PAS250 Specifications

Lightweight all Aluminium Construction

For further information or assistance, please contact Interlink Alloy Systems Limited—Tel 01992 716509 Or visit: www.interlinkalloy.co.uk



ALWAYS LOCK ALL CASTORS WHEN PODIUM IS SITED, AND BEFORE USE.

1000/1250 AND PAS 250 1000/1250 PODIUM UNIT ASSEMBLY GUIDE



1 X FOLDING FRAME
1 X PLATFORM
1 X LADDER
2 X STABILISER(MINI OR
STANDARD)(FOR PAS 250
COMPLIANCE)
2 X GUARDRAIL BRACE



2) OPEN FRAME AND LOCK MECHANISM



3) FIT PLATFORM AT CORRECT HEIGHT



4) POSITION UNIT AND LOCK CASTORS



5) CLIP UPPER BRACE OF LADDER ABOVE RINGS ON VERTICALS WITH ASSEM-BLED HOOKS AT TOP



6) FIT STABILISERS TO BACK VERTICALS(FOR PAS 250 COMPLIANCE)



7) USE LADDER TO ACCESS PLATFORM



8) CLOSE AND LOCK GATE



9) TO WORK AT UPPER LEVEL RELOCATE PLAT-FORM



10) MOVE SIDE FRAMES UP AND LOCATE CLIPS IN HOLES



11) FIT GUARDRAIL BRACES AT FRONT AND BACK OF UNIT



12) CLOSE AND LOCK GATE